


Montageanleitung / Assembly instruction / Notice de montage




Stoßgriffe S-310, S-330
 Pull handle S-310, S-330
 Poignée de tirage S-310, S-330




1

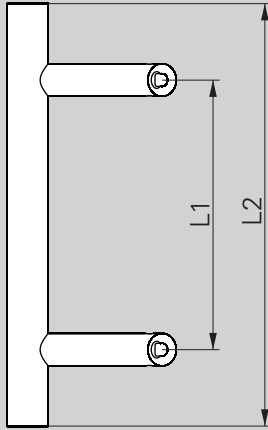

	L1	L2
S-330	210mm	330mm
S-310	600mm	1000mm

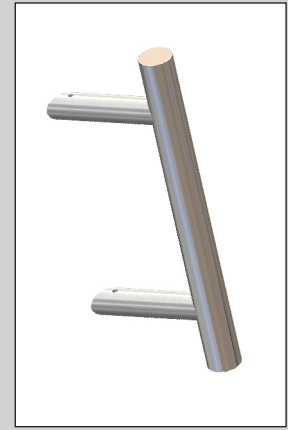


2a

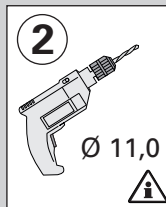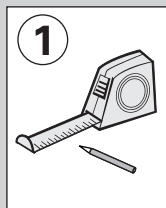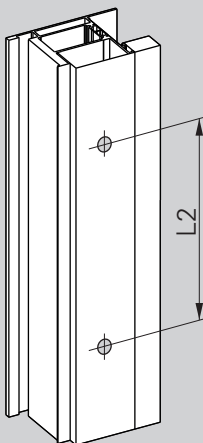




Montage für Rohrrahmen Türen
 Assembly for sectional frame doors
 Montage sur portes en profilé

3

M8 Einnietmuttern setzen.
Nicht im Lieferumfang
enthalten!
 Insert M8 riv nuts.
Not included!
 Mettre en place
 l'écrou noyé M8.
Non fourni!

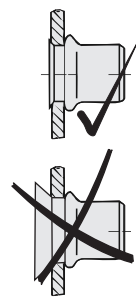

2b

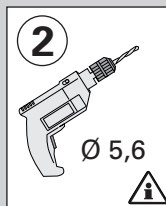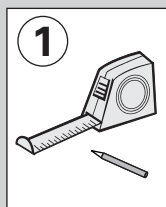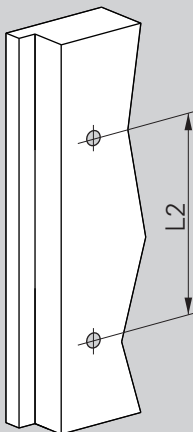


Montage für Holztüren
 Assembly for wooden doors
 Montage sur portes en bois

Montageanleitung / Assembly instruction / Notice de montage




Stoßgriffe S-310, S-330
 Pull handle S-310, S-330
 Poignée de tirage S-310, S-330

3a

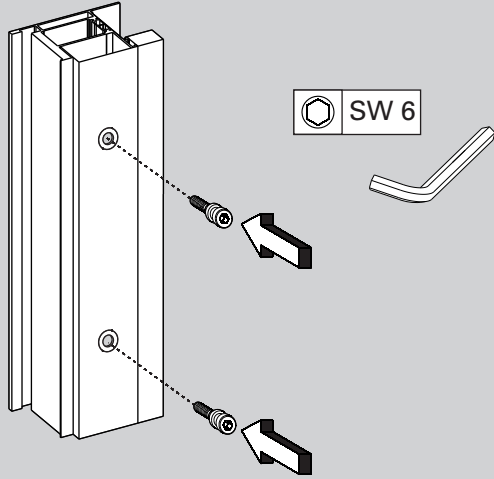


Montage für Rohrrahmen Türen
 Assembly for sectional frame doors
 Montage sur portes en profilé

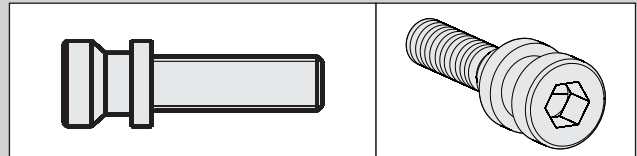


Art.Nr.: 13255990

3b

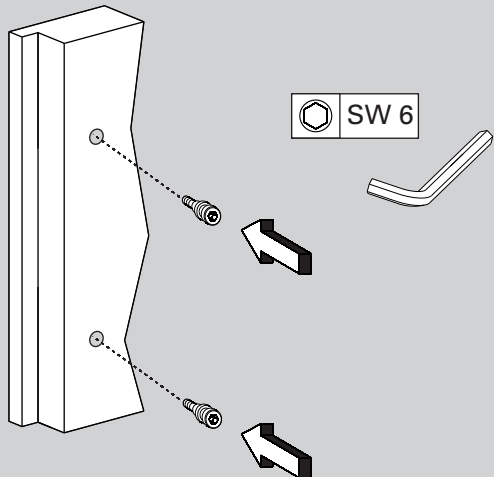

Montage für Holztüren
 Assembly for wooden doors
 Montage sur portes en bois

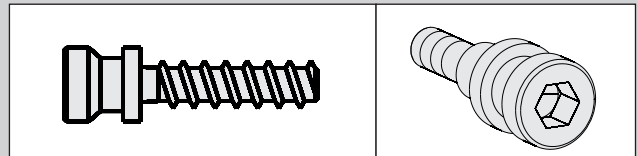

Art.Nr.: 13255991

4

